Assembly Instructions

EASYFIT ULTIMA WALKWAY PERGOLA KITS

We recommend that you read these instructions thoroughly before starting assembly; familiarise yourself with the process and double check you have the correct components and the recommended tools to complete the job. We highly recommend that any assembly is carried out on an open flat, level surface if possible with sufficient space.

Assembly of these kits will require the assistance of at least 1 other person, although for quicker and easier we recommend at least 3 people total.



TOOLS REQUIRED

- Rubber Mallet/Soft Hammer
- Bubble Level/Laser Level
- Step ladder or Suitable platform
- Electric Drill/Screw Driver (Optional)
- T25 Torx Bit (Included)

COMPONENTS & DETAILS

The components and details listed below are those required to build one of the selected kits, and will all come pre-notched/pre-slotted ready to put together.

63mm Stainless Steel Exterior Screws (1 Box for All Kits)



Bearers



Notched/Slotted Rafters



Notched/Slotted Posts



Kits

6000mm x 2400mm

4x Bearers @ 3000mm 10x Notched/Slotted Rafters @ 2400mm 6x Notched/Slotted Posts @ Chosen Size

Post Spacing:

100mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 2650mm | Inside Posts (Width) 1800mm

125mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 2610mm | Inside Posts (Width) 1750mm

150mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 2575mm | Inside Posts (Width) 1700mm

200mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 2500mm | Inside Posts (Width) 1600mm

6000mm x 3000mm

4x Bearers @ 3000mm 10x Notched/Slotted Rafters @ 3000mm 6x Notched/Slotted Posts @ Chosen Size

Post Spacing:

100mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 2650mm | Inside Posts (Width) 2400mm

125mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 2610mm | Inside Posts (Width) 2350mm

150mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 2575mm | Inside Posts (Width) 2300mm

200mm Posts:
Outside Posts (Length) 5600mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 2500mm | Inside Posts (Width) 2200mm

9600mm x 2400mm

4x Bearers @ 4800mm 14x Notched/Slotted Rafters @ 2400mm 6x Notched/Slotted Posts @ Chosen Size

Post Spacing:

100mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 4450mm | Inside Posts (Width) 1800mm

125mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 4410mm | Inside Posts (Width) 1750mm

150mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 4375mm | Inside Posts (Width) 1700mm

200mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2000mm - Inside Posts (Length) 4300mm | Inside Posts (Width) 1600mm

9600mm x 3000mm

4x Bearers @ 4800mm 14x Notched/Slotted Rafters @ 3000mm 6x Notched/Slotted Posts @ Chosen Size

Post Spacing:

100mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 4450mm | Inside Posts (Width) 2400mm

125mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 4410mm | Inside Posts (Width) 2350mm

150mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 4375mm | Inside Posts (Width) 2300mm

200mm Posts:
Outside Posts (Length) 9200mm | Outside Posts (Width) 2600mm - Inside Posts (Length) 4300mm | Inside Posts (Width) 2200mm

ASSEMBLY INSTRUCTIONS


STEP 1



Start by securing in place the 6 provided posts, ensuring the slots are lined up and parallel. To ensure post placement is correct, measure from the outside of the end posts to the centre of the middle post along the length.

[reference components for kit dimensions]

STEP 2

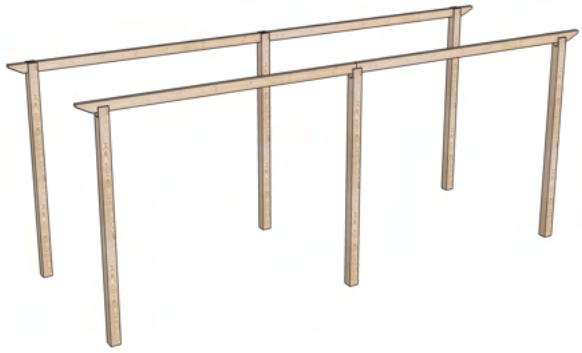

Once all posts are in place and secured, slot in the 4 provided bearers running from the slot in one post to the other, ensuring you leave an equal overhang on each side (approximately 200mm).

With these centre post walkway kits, each bearer will have one profiled end* and one flat end, ensure the two flat ends are butted together in the centre post and secure with screws if necessary.

STEP 3



After the bearers are in place, you can take 2 of the provided rafters and slot them onto the bearers on the outside of the posts as referenced in the picture above.

STEP 4 - FINAL



Take the remaining provided rafters and slot them evenly along the bearers

STEP 3



At the point, the kit is fully assembled and it is your decision to further secure together using the provided 63mm exterior screws.

We hope that you found your EasyFit Pergol kit quick and easy to assemble, but if not and you require any further assistance please get in touch.

Telephone: 01536 267107

Email: sales@uk-timber.co.uk

www.uk-timber.co.uk