



## 3.6m by 3.6m Standard Decking Kit | Instructions

Green Treated Swedish Redwood Pine



UK Timber Ltd

Whether you are a first-time DIYer looking to improve your own garden, or a professional looking for high quality decking kits for use on your clients' projects, here at UK Timber we have developed an easy to assemble decking kit for you at unbeatable prices.

Have your own decked area and make the most of your lovely garden and outdoor areas.

## Kit Contents

Qty.	Part
2	Green Treated Decking Joists 3600mm x 100mm x 50mm
10	Green Treated Decking Joists 3500mm x 100mm x 50mm
24	Green Treated Swedish Redwood Pine Decking Boards 145mm x 28mm
40	Fence Mate Galvanised Nails 100mm
480	Timber Titan Decking Screws

## Quick Reference

Step by Step	<a href="#">Preparation and Step by Step Guide</a>
Step 1	<a href="#">Constructing The Frame</a>
Step 2	<a href="#">Fastening the Deck Boards</a>



## Step by Step |

Before building your deck, remember to prepare all the timber and tools you will need, and also prepare the surface on which you are building your deck upon.

If you plan on building your deck on top of soil, we recommend that you compress any loose soil then lay down a layer of soil membrane to prevent any unwanted weeds poking through and ruining the finish of your decking. It is also recommended to use pointed stakes with roughly a 50mm x 25mm section screwed into each corner of the frame to secure it to the ground and provide a stable base.



## Step 1a |

To construct your decking kit, start off by laying down **2 3600mm x 100mm x 50mm** joists along with **2 3500mm x 100mm x 50mm** joists and form a square frame, which you will then fasten together using 8 of the provided Fence Mate galvanised nails, like so:

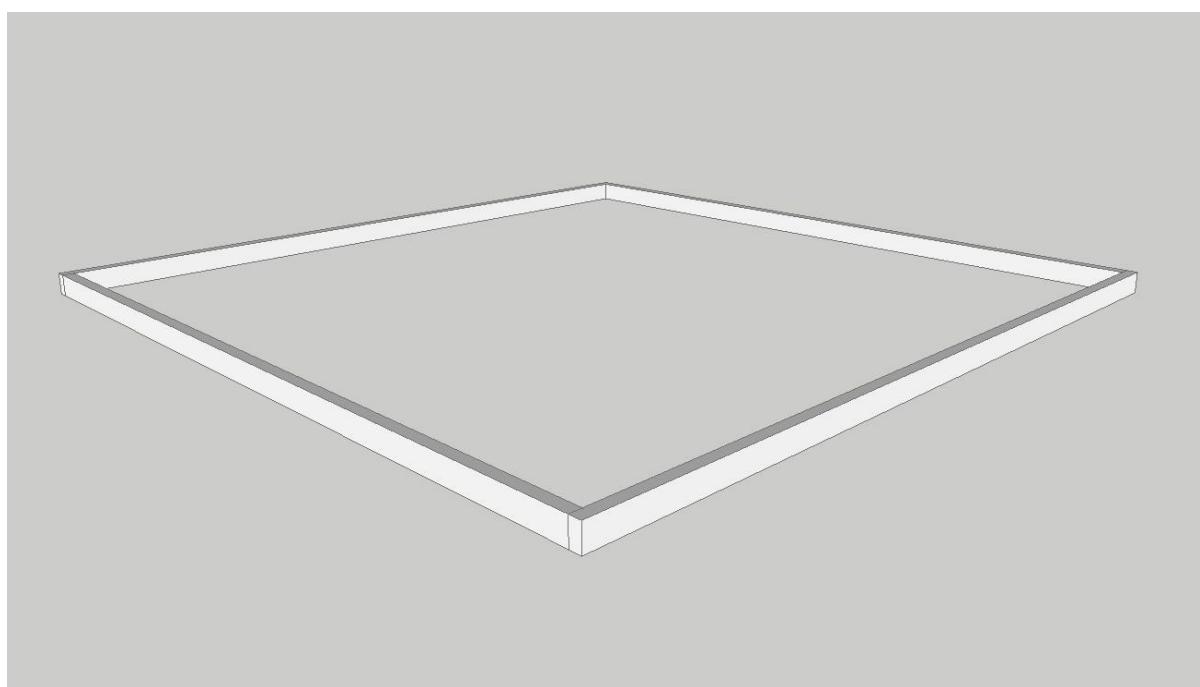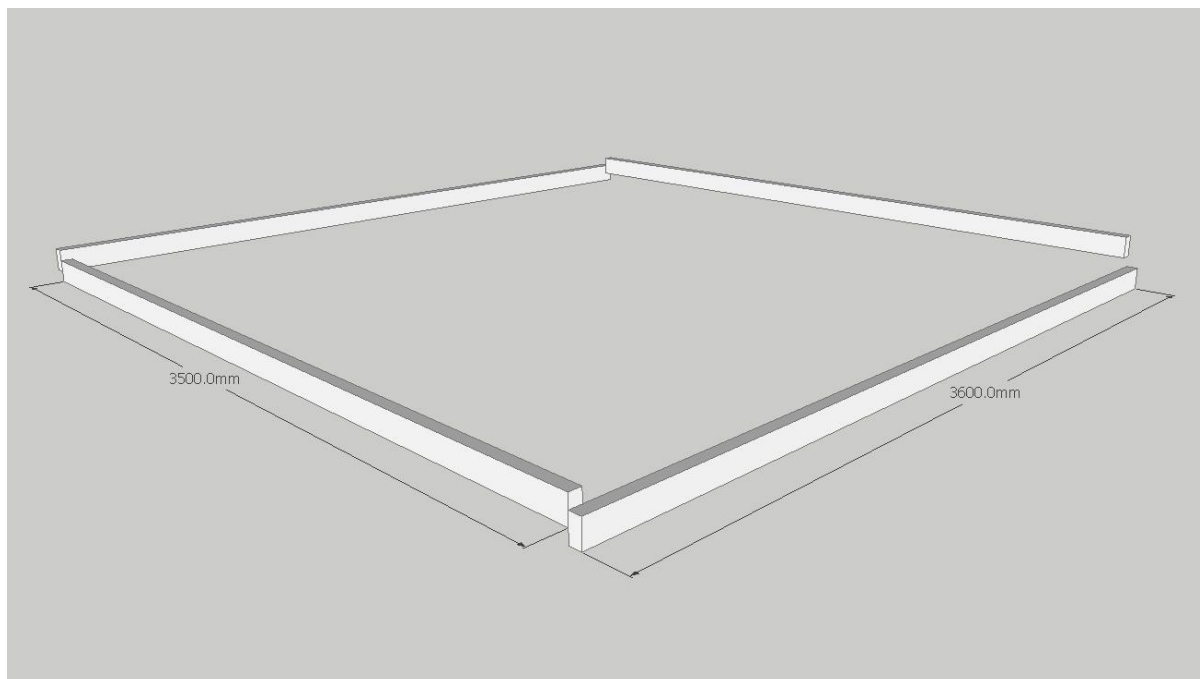


## Step 1b |

Once you have a square frame, you can start to add joists along the length of the deck using the remaining **8 3500mm x 100mm x 50mm** joists remembering to have spacing of roughly 345mm between each joist:

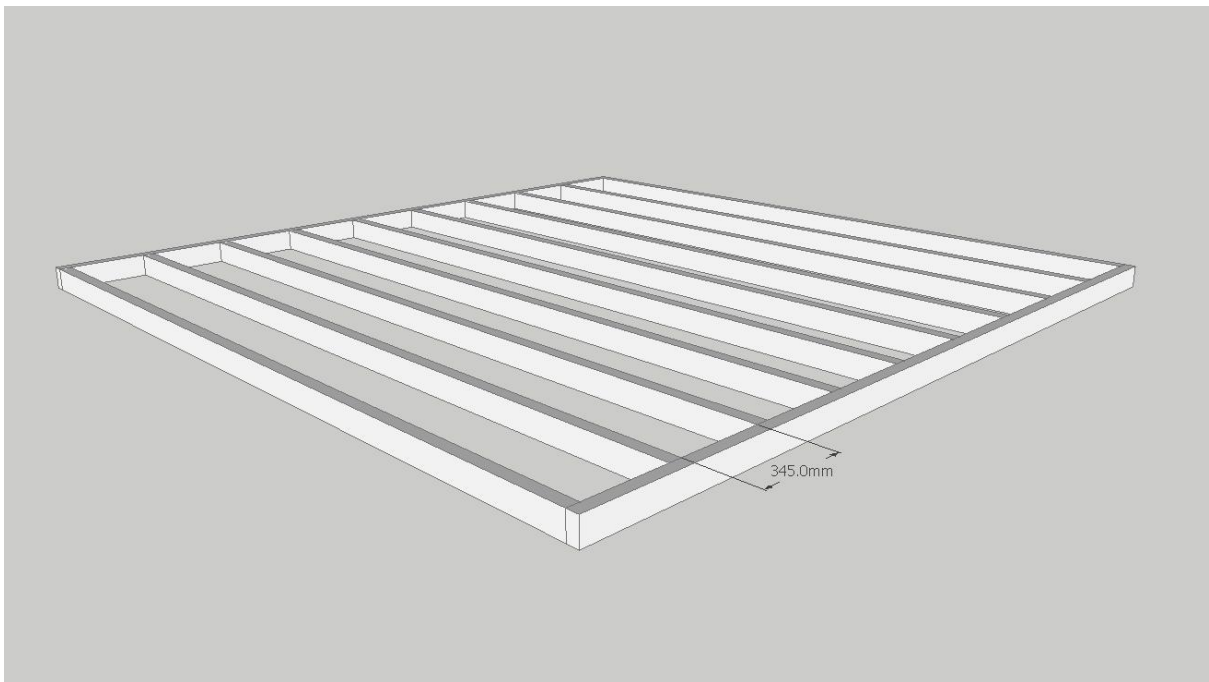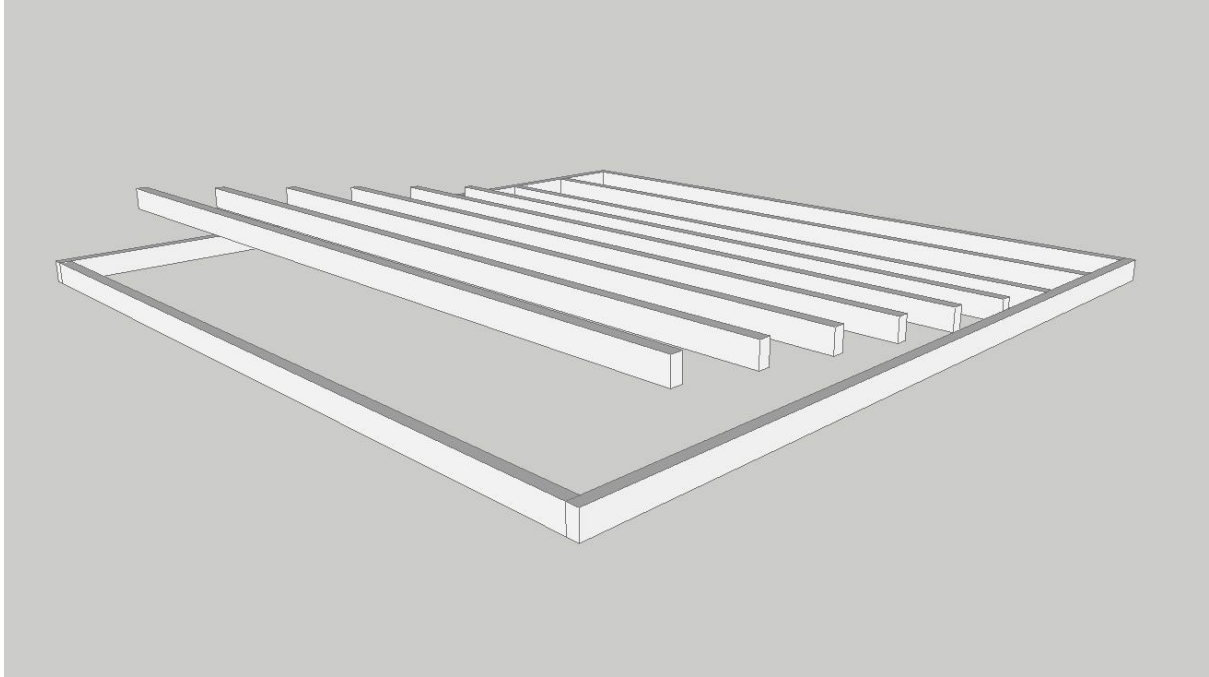

(When fastening the joists, we recommend driving the nails in at an angle in a crossing fashion as seen below)

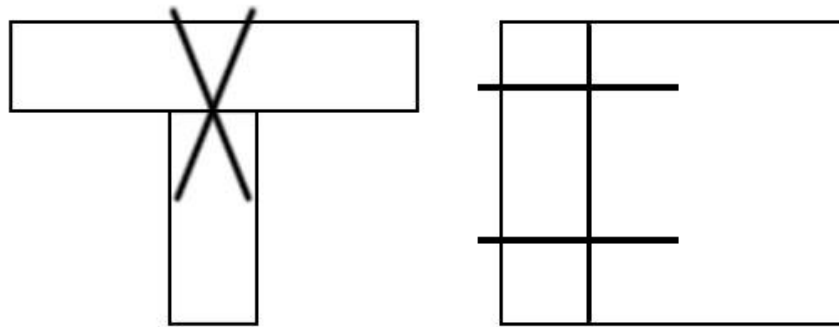

## Step 2 |

Once the frame is constructed and secure in place, you can now begin to place and fasten the 24 deck boards to the joists, securing them with the supplied decking screws using two screws at every joist intersection. Each board must be spaced approximately 5mm apart to allow the timber to move:

