

Assembly Instructions SQUARE HERB BOX SLOT TOGETHER RAISED BED KITS

We recommend that you read these instructions thoroughly before starting assembly; familiarise yourself with the process and double check you have the correct components and the recommended tools to complete the job. We highly recommend that any assembly is carried out on an open flat, level surface if possible with sufficient space.

Assembly of these kits can be done by a single person, although an additional pair of hands will make it quicker and easier.



UK Timber Limited, The Gas Depot, Weldon Road, Corby, NN17 5UE Company No: 04346719 | VAT No: 786 8109 81


TOOLS REQUIRED

- No Tools Required
- Rubber Mallet/Soft Hammer (Recommended)

COMPONENTS

The components listed below are those required to build one of the three available kit tiers and all kits will come with a selection of full width and half width timbers.

Single Tier Kit Components

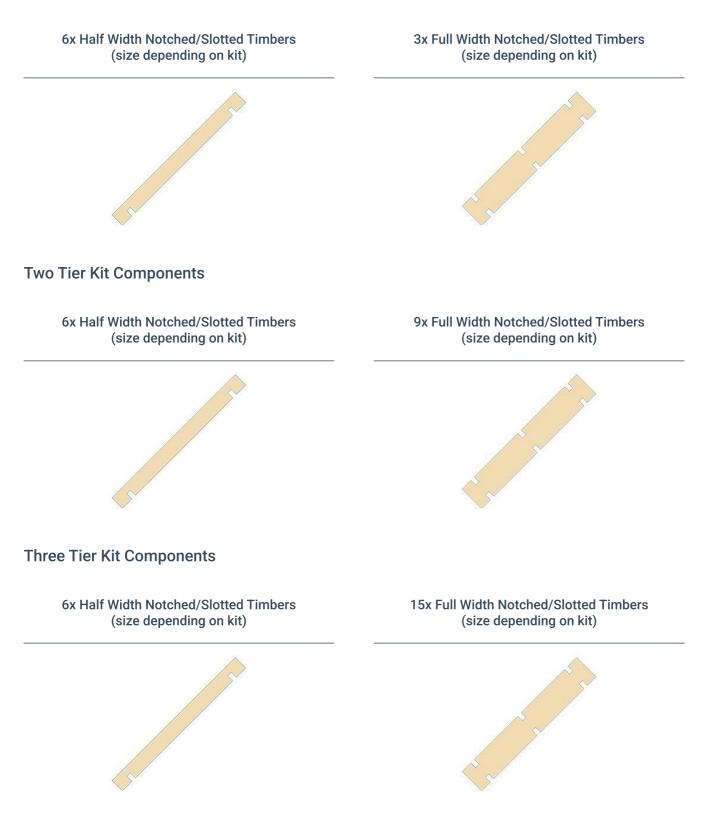

STEPS FOR SINGLE TIER KIT





Begin by placing three of the provided half width timbers equally apart, enough so that they would make an even square.

STEP 3




Slot in the last three half width timbers to complete the kit. We recommend using a rubber mallet and softly tapping on all corners to ensure the slots/joints are all fully seated.

STEP 2



Next you will need to line-up and slot in the three full width timbers into the three pieces previously placed and ensure they are fully seated in the slots.

STEP 4 - FINAL

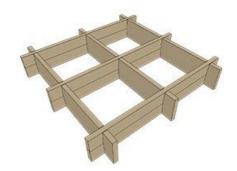

The kit has now been fully assembled and it can be used as intended. Although we do not supply any fixings, and they're not necessary, at this point you can use some fixings to further secure the kit together (with Oak we recommend only using stainless steel).


STEPS FOR MULTI TIER KIT





Begin by placing three of the provided half width timbers equally apart, enough so that they would make an even square.

STEP 3

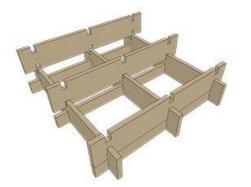


Next, line-up and slot in the next three full width timbers ensuring they are fully seated in the slots.

STEP 2




Next you will need to line-up and slot in three of the full width timbers into the three pieces previously placed and ensure they are fully seated in the slots.

STEP 4

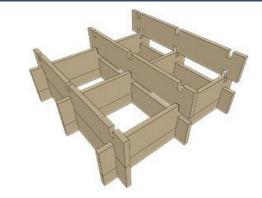

Like step 2, slot in three more of the full width timbers, again ensuring they're fully seated. (Repeat step 3 to 4 once more for three tier kits)

STEP 6 - FINAL

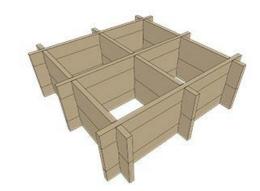


The kit has now been fully assembled and it can be used as intended. Although we do not supply any fixings, and they're not necessary, at this point you can use some fixings to further secure the kit together (with Oak we recommend only using stainless steel).

We hope that you found your slot together raised bed kit quick and easy to assemble, but if not and you require any further assistance please get in touch.

Telephone: 01536 267107 Email: sales@uk-timber.co.uk

www.uk-timber.co.uk

STEP 5

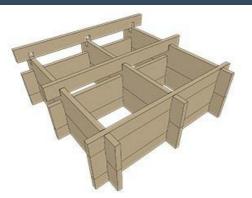

Slot in the last three half width timbers to complete the kit. We recommend using a rubber mallet and softly tapping on all corners to ensure the slots/joints are all fully seated.